

AUTOMATIC GEL SOAP/SANITIZER DISPENSER INSTRUCTION

INCLUDED IN PACKAGE

Dispenser unit, wall hanging rack with battery housing, security key, screws and anchors.

INSTALLATION AND OPERATING INSTRUCTIONS

1. Remove contents from box and slide empty dispenser unit up to unhook it from wall rack.
2. Affix the wall rack in your desired location using strong adhesive strips (not provided) or the included screws and anchors. Leave at least 30cm gap between the bottom of the dispenser and any surfaces beneath it.
3. Remove battery cover and insert four AA batteries (not provided). Reattach battery cover.
4. Slide dispenser unit down on wall rack until top and bottom dispenser hooks are firmly engaged into their compartments on the rack. Make sure the power nodes on the back of the dispenser touch the metal conductors beneath the battery compartment on the wall rack.
5. Locate the white button on the bottom of the dispenser. Press and hold it until a solid red light is displayed. The dispenser is now operational. Press the button again briefly (2 seconds) to cycle between desired volumes. The red light will flash to indicate volume to be dispensed: one flash (low), two (medium), and three times (high). The amount will range from approximately 0.8ml – 3.0ml. It is best to set the amount before filling the dispenser with gel. Once set, fill the dispenser with gel.
6. For best performance, make sure the dispenser is always more than 25% full. If gel is not dispensing smoothly, wipe the dispenser bottom nozzle opening to clear blockages and check on battery life.
7. CAUTION: when pressing the button to cycle volumes, hold one hand on the top of the dispenser to prevent it from sliding off the rack and falling.

